

For lead-acid batteries until 100 Ah.

3 FUNCTIONS

- **Test the starting capacity of the battery.**
- **Indicates the state (good or bad) of the battery.**
- **Test the alternator voltage.** It detects if there is a problem in the load circuit of the vehicle which can damage the battery or the electronic onboard.

-> Quick analysis results (< 10 sec.) with reading simplification thanks to "colour" codes.



CE - EN 60335-2-29

| Battery | | TEST | | | PRINT PAPER | DIGITAL | RESULT | TEMPERATURE COMPENSATION | cm | kg | |
|---------|----------|-----------|-----------|------------------------------------|-------------|---------|--------|--------------------------|----|---------------|-----|
| A | V | Battery A | Battery V | CHARGING & STARTING SYSTEM VEHICLE | | | | | | | |
| 6-12V | 20>100Ah | • | • | 12V | - | - | 5/10s | 15 min | - | 16 x 1.8 x 30 | 1.5 |

Made in China

www.gys.fr