

For lead-acid batteries until 160 Ah.

## 4 FUNCTIONS

- **Test the starting capacity of the battery.**
- **Indicates the state (good or bad) of the battery.**
- **Test the charge level of the battery**
- **Test the alternator voltage.** It detects if there is a problem in the load circuit of the vehicle which can damage the battery or the electronic onboard.

-> Quick analysis results (15 sec.) with reading simplification thanks to "colour" codes.



CE - EN 60335-2-29

		TEST			PRINT PAPER	DIGITAL	RESULT		TEMPERATURE COMPENSATION	cm	kg
Battery A	Battery V	CHARGING & STARTING SYSTEM VEHICLE									
12V	10>160Ah	•	•	12V	-	-	15s	15 min	-	27 x 26 x 13	3,75

Made in China

[www.gys.fr](http://www.gys.fr)